

FBF8075 | FBF8090 | FBF8110 | FBF8132



Compression head and Homogenizing valve

- The Compression head is manufactured from a single block of high quality stainless steel, of a special type, forged and checked with ultrasounds, with a 5 year guarantee against cracking and defects
- Each valve assembly is housed within an individually inspected special AISI 316 stainless steel block
- Pumping Pistons manufactured with a rear cooling chamber, a double guide to keep a perfect alignment, and a special "Diamond Like Carbon" plating (as a standard)
- Valve group assemblies have replaceable seats and hemispherical valve shutters, ideal for processing a very wide range of products
- Homogenizing valves designed to provide efficient use of energy, with high stability and alignment of the moving parts (impact head) due to the hydrodynamic assembly, which ensures a vibration free homogenization

- Safety valve, in sanitary execution, of spring type with replaceable shutter and seat

Motorization - Structure

- The Pump body is made from a thick walled premium grade high-resistance cast iron, engineered to withstand heavy loads and cancel out vibration
- The crankshaft is made from a special forged steel, machined from a solid piece, "multi-step" heat treatments, super-finishing of the goosenecks and complete nitriding, is checked using ultrasounds. The crankshaft is supported by 5 robust roller bearings (with bronze bearings used only on the crank pins)
- Power transmission with double reduction stage: "V" belts/pulleys, with semi-automatic tensioning system, with two helicoidal gears within the pump body (slow gear coupled directly on the crankshaft)
- Lubricating plant of pressurized type with the level of the oil detected by a proper sensor, cooling of the oil by a tubular heat-

exchanger, an alarm for irregular pressure, an alarm for high temperature, and driven filtering of any possible impurities. For the best thermal balance/dissipating all transmission components are immersed in an oil bath


- 3 phase, 4 pole, AC electric drive motor of leading Company
- The frame is constructed from a square-section carbonated steel pipe coated in a powder painting, and supplied with dismountable stainless steel panels with satin finish

Maintenance kit

- Initial set of spare parts supplied with the machine include the following: full set of gaskets, a set of springs for valves and a complete safety valve set
- Set of tools for ordinary maintenance
- Lubrication oil
- Instruction and maintenance manuals (2 copies + CD ROM)



Technical Features		
FBF8075	kW	75
FBF8090	kW	90
FBF8110	kW	110
FBF8132	kW	132
Pumping pistons	N.	3
Water consumption	l/h	90-120
Weight	kg	3.230 - 3.500
Dimensions (LxDxH)	cm	180x220x160

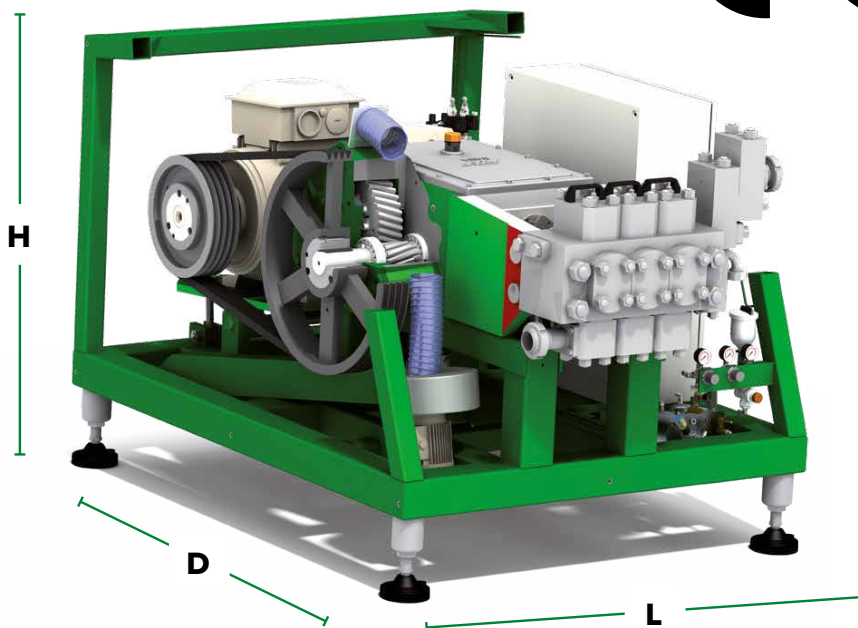

Standard options

- 2nd stage homogenizing valve controlled by a special oil-pneumatic system
- Digital pressure transducers and analogue gauges with 4-20 mA output
- Fixed capacity (electrical plant placed inside the machine for all the power at 380/460V and 75 kW at 200/240V; external, stainless steel made with soft-starter equipment for 200/240V at 90 kW and over)
- Variable Capacity (remote stainless steel cabinet; conditioning unit with 110/132 kW only at 200/240V)
- Aseptic Version with "sterility barriers" traced with steam condensate created by an integrated plant
- Pulsation dampeners on product inlet and/or outlet connections, for special aseptic version as well
- Pressure gauge with alarm contacts for the automatic cut-off of the homogenizing pressure, complete with timing device to manage the start/stop of the homogenizing valves
- Automatic homogenization pressure controller

Functional Features									
Operating pressure	bar	100	130	150	180	200	230	250	300
Capacity	from (l/h)	16.500	16.500	16.000	12.500	12.500	10.500	10.000	8.500
	to (l/h)	25.000	25.000	24.000	20.000	18.000	16.500	15.000	12.000

Technical specifications can vary and are subject to change without notice